

# Valor

## Valorstat Programmable Remote Control

Your Valor Remote Control helps you get the comfort, convenience and aesthetics you want from your Valor Gas Fireplace. The "remote" controls your fireplace in three different ways. This will teach you how to use the remote control.

*Note: if you'd just like to turn your Valor to the desired temperature, just press and hold the "AUTO" button until the display flashes, then push the up (▲) or (▼) button to the desired temperature.*

### Setting the Time

The first thing to do is to set the time . Here's how:

1. With your left thumb, hold down **both** the "AUTO" and the "TIMER" button until "F" flashes. Let go.
2. Note the digital clock on the bottom right hand corner. The large "up" button (▲) sets the hour; the "down" (▼) button sets the minutes. Set the time. Note: you must start setting the time while the "F" is flashing. If it stops flashing, go back to 1.
3. Let go and wait until the flashing stops. The remote tells you the time you set. It also tells you the current temperature.

### Setting the Temperature

Use this setting when you come in and want to enjoy a certain temperature.

Here's what you do:

1. Push the "AUTO" button until a number and "F" flash. Let go.
2. While it is still flashing, push the up (▲) and down (▼) button to the temperature you want. Let it go.

Your Valor will reach that temperature and the remote will check the temperature every five minutes, adjusting the amount of fuel needed to give you a steady, even heat.

Note: be patient with settings as it can take a few seconds.

## Setting the Flame

Use this setting when you want a particular flame level. For instance, you want to watch flames burn at their highest level, and you don't mind if the room is too hot.

Here's what you do:

1. Press the large "down" (▼) button.
2. The word "man" displays as well as an arrow in the left upper corner. Let go.
3. To raise the flame, press and hold the "up" (▲) button until you come to the flame level you want. Let go.
4. To lower the flame, press and hold the down (▼) button until you come to the flame you want. Let go.

The **flame level** will remain just as you set it.

## Programming Time and Temperature

You can set your Valor to come on before you waken and turn after you leave home and turn on again just before you come home and turn off after going to bed. You can leave it like this for the heating season.

Here's what you do:

1. Decide what temperature you want your Valor to be at; also decide what time you want your Valor to turn on and off; then decide what time you want it to come back on and off in the afternoon or evening. For the first few times you set the timer, it's handy to write these times down.
2. Set the temperature (just as you did in the section on "setting the temperature.")
3. Press the "timer" button and hold until "P1\*" appears and flashes. Let go. While flashing, push the "up" (▲) button to the hour you want your Valor to turn on in the morning and the (▼) to the minute.
4. Press "timer" to P1 (moon) and proceed as in step 3, to turn off time.
5. Press "timer" again, and you get "P2\*" to set the time to come back on in the afternoon. Set the time.
6. Press "timer" again to get P2 (moon) to set the time for your Valor to go off in the evening.
7. Do nothing else, and your Valor will give you steady, even heat at the temperatures and times you set.

Note: If you want to set your Valor for only 1 time on and off, set P2 for the same times as P1.

To temporarily override the timer setting, just press "auto" or "manual". Press "timer" when you want to go back to your settings.